


# Auto-Alarm Manual

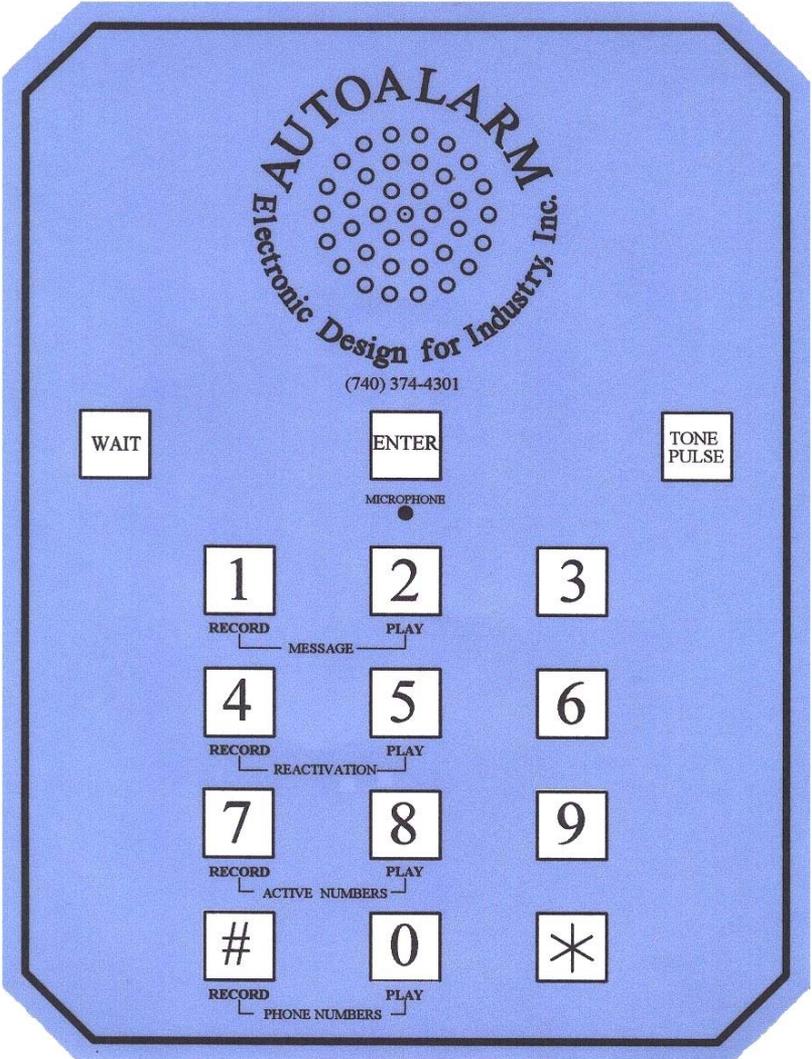

**Memory Location**

**Phone Number.....**

1	
2	
3	
4	
5	
6	
7	
8	

**Distributed By:**

## **AUTO-ALARM QUICK START**

### **RECORDING ALARM MESSAGES:**

Press and hold button [1] and then press button [2]. Release both buttons. Press and **hold** either button [1] or button [2] during the voice message, beep and while recording the alarm messages. Release button when the message is complete

### **STORING PHONE NUMBERS:**

Press and hold button [#] and then press button [0]. Release both buttons. Press a button [1] through [8] to select a location for the number. Enter the phone number you want the Auto-Alarm to call. Press [ENTER] when complete. If the Auto-Alarm will be calling a pager, enter the phone number of the paging company + [wait] + the numeric message you want the pager to display. Repeat the above operation for each number you want the Auto-Alarm to call.

### **SETTING ACTIVE PHONE NUMBERS:**

Press and hold button [7] and then press button [8]. Release both buttons. Press each button [1] through [8] for each phone number the Auto-Alarm is to call in the event of an Alarm. Press [ENTER] when complete.

### **SETTING THE REACTIVATION TIME:**

Press and hold button [4] and then press button [5]. Release both buttons. Press a button [1] through [9] to select the number of hours between recalls of the active phone numbers during an alarm.

### **PLAYING BACK ALARM MESSAGES:**

Press button [2] then select the location by pressing button [1] or [2].

### **PLAYING BACK STORED PHONE NUMBERS:**

Press button [0] then select a button [1] through [8] for the location that has the phone number stored.

### **PLAYING BACK ACTIVE PHONE NUMBER LOCATIONS:**

Press button [8] and the active phone number locations will be played.

### **PLAYING BACK REACTIVATION TIME:**

Press button [5] and the reactivation time in hours will be played.

### **Description**

In the event of a user defined alarm condition, the Auto-Alarm system is designed to contact a person, pager, answering machine, answering service or voice mail to leave a message describing the alarm condition.

The Auto-Alarm system will accept up to eight phone numbers. The user can choose which phone numbers will be active. When an alarm condition exists, the system will call the active numbers. When an answer is detected, the recorded message will be played, and the number will be dropped out of the active calling sequence. If there is no answer or a busy signal is detected, the phone number will be left in the calling sequence and the system will go to the next active phone number. The system will call each active number up to three times. The operator may choose to cancel the calling sequence. If the system cycles through the active numbers three times and no one has responded to the alarm, the system will wait for a predetermined time (reactivation time) and start the calling sequence again.

### **Recording Alarm Messages**

Press and hold the Message Record button [1] and then press the Message Play button [2]. Release both buttons. The system will prompt “*Enter Message Location*”. Press and **hold** either button [1] (*for alarm message 1*) or button [2] (*for alarm message 2*) **during** the voice message “*Location # recording alarm message.....Beep*” and while recording the alarm message. Release the button when the message is complete. The system will prompt “*Beep .....Operation Complete*”.

### **Playing Back Alarm Messages**

Press the message play button [2], and the system will prompt with “*Enter Message Location*”, then select the location by pressing button [1] or [2]. The message for the alarm will be played followed by a “*Beep*”.

### **Storing Phone Numbers**

The Auto-Alarm can dial up to eight phone numbers. Each phone number is stored in a *memory location*. To enter a phone number, press and hold Phone Numbers Record button [#] and then press the Phone Numbers Play button [0]. Release both buttons. The system will prompt “*Enter Location*”. Press a button [1] through [8] to select a location for the number. The system will prompt “*Location # Enter Phone Number.....Beep*”. Enter the phone number you want the Auto-Alarm to call. Press [ENTER] when complete. The system will prompt “*Operation Complete*”. If the Auto-Alarm will be calling a pager, enter the phone number of the paging company + [WAIT] + the numeric message you want the pager to display. Repeat the above operation for each number you want the Auto-Alarm to call.

### **Playing Back Stored Phone Numbers**

Press the Phone Numbers Play button [0]. The system will prompt “*Enter Location*”, then select a button [1] through [8] for the location that has the phone number stored. The system will repeat the phone number followed by “*Operation Complete*”.

### **Active Phone Numbers**

The Auto-Alarm allows an active phone number list to be set out of the 8 available storage locations. This can be used to quickly change the phone number list the Auto-Alarm calls. An Example would be changing the phone number list for the weekend or a Holiday.

### **Setting Active Phone Numbers**

Press and hold the Active Numbers Record button [7] and then press Active Numbers Play button [8]. Release both buttons. **After the voice prompts “Enter Active Phone Numbers”**, press each button [1] through [8] for each phone number location the Auto-Alarm is to call in the event of an Alarm. Press [ENTER] when complete. **The voice prompt will say “Operation Complete”**.

### **Playing Back Active Phone Number Locations**

Press the Active Numbers Play button [8] and the active phone number locations will be played.

The active phone numbers can also be changed using a touch tone telephone. Call the Auto-Alarm; it will prompt with the status of the battery. If an alarm condition exists, the recorded message will play. The system will then prompt **“Beep.....Enter Operation”**. Press [5] on the telephone keypad. The system will repeat the current active phone number location list then prompt **“Operation Complete.....Enter Active Phone Number Location List”**. Enter the *new memory locations* followed by the [#] key. The [#] key will save the active phone numbers. The system will then prompt with **“Operation Complete.....Enter Operation”**. Either hang-up the phone or continue with a new operation.

### **Reactivation Time**

The reactivation time is the time (in hours) the Auto-Alarm will wait before recalling the active phone numbers if the alarm condition still exists.

### **Setting The Reactivation Time**

Press and hold the reactivation record button [4] and then press the reactivation play button [5]. Release both buttons. ***The system will prompt “Enter Reactivation Time.....Beep”.*** Press a button [1] through [9] to select the number of hours between recalls of the active phone numbers during an alarm. ***The system will then prompt “Operation Complete”.***

### **Playing Back Reactivation Time**

Press the Reactivation play button [5] and the reactivation time in hours will be played.

### **Tone/Pulse**

The Auto-Alarm can dial out using either tone or pulse. The system will prompt “***Tone***” or “***Pulse***”; allowing the operator to choose the desired setting.

### **Canceling the Calling Sequence**

If the operator is going to respond to the alarm condition, he may choose to cancel the calling sequence. After the alarm message is played, a “***Beep***” will follow. Pressing the [6] key on the telephone keypad cancels the calling sequence (no other active phone numbers will be called).

**NOTE:** If the alarm condition still exists after the reactivation time has expired, the calling sequence will be repeated (all active phone numbers will be called).



**QUALITY & SERVICE  
MAKE THE "DIFF"**

Electronic Design for Industry

100 Ayers Blvd.

Belpre, OH 45714

740-401-4000

[www.ediplungerlift.com](http://www.ediplungerlift.com)