

# The Auto-Alarm System You Can Depend On

*Another Quality Innovation By EDI*

## The WAIT Button

The Wait button is used to let the Auto Alarm know that it is calling a pager.

## Record/Play Alarm Message


This is a user recorded message that will be played when an alarm condition exists.

## Record/Play Reactivation Time

The Reactivation Time is the time (in hours) the Auto-Alarm will wait to redial phone numbers if the alarm condition still exists.

## Remote Control

The Auto-Alarm also has the ability to change the "Active Numbers" from a touch-tone telephone.

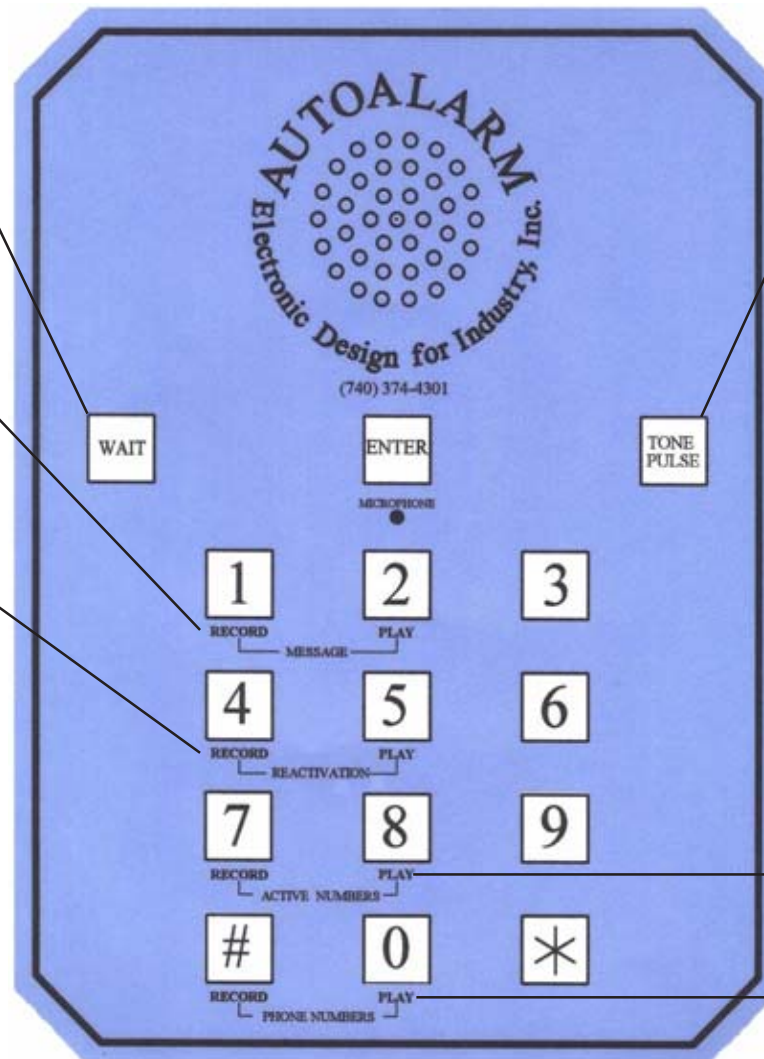

## The Tone/Pulse Button

The Tone/Pulse button is used to toggle between tone and pulse dialing modes.

## Record/Play Active Numbers

Use the "Active Numbers" function to activate the phone numbers you want the Auto-Alarm to dial in an alarm condition.

## Record/Play Phone Numbers

Enter up to eight phone numbers. Then use the "Active Numbers" function to activate the phone numbers you want the Auto-Alarm to dial in an alarm condition.